


Save the post under a new name


Save the post under a new name

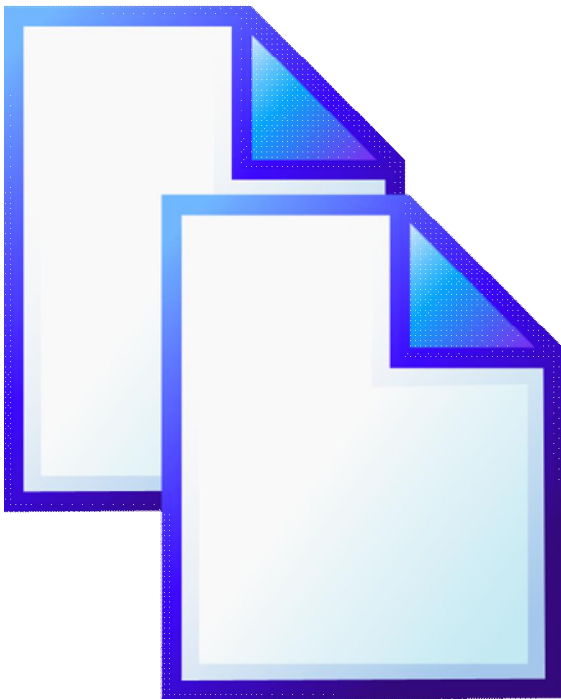

Why?


- Backup
- Versioning
- Tests

Save the post under a new name

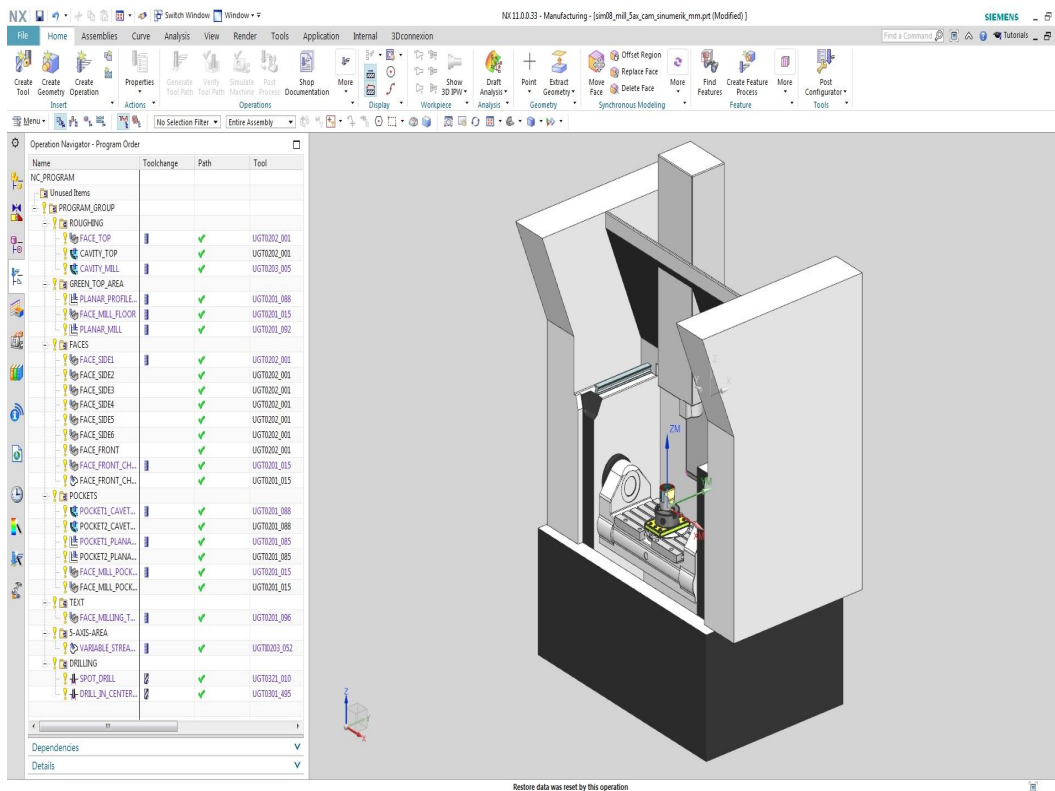


- Open sim08_mill_5ax_cam_sinumerik_mm.prt
- (D:\splmshare\nx110\MACH\samples)
- Open Post Configurator
- Create New Postprocessor
- Type Name Berlin_Post
- Select a Output Directory
- Push OK
- Select the new createt Post
- Push OK
- Use Save As button
- Type Name Berlin_Post_new
- Select a Output Directory
- Push OK

Save the post under a new name

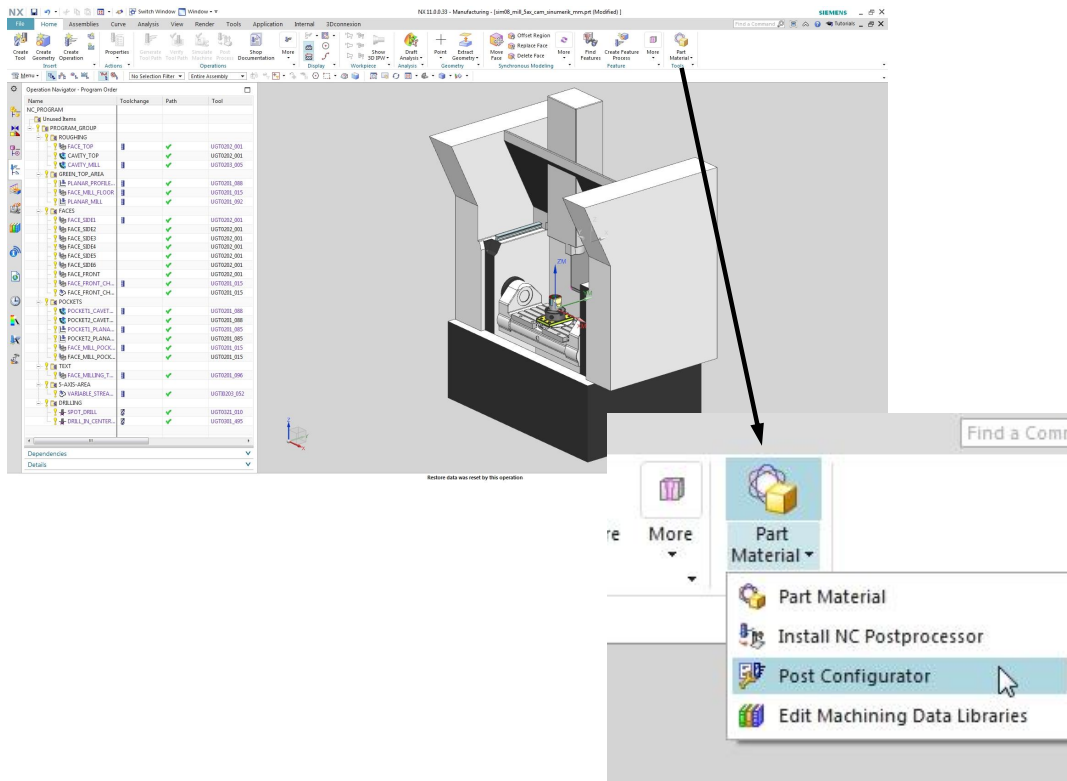


- Open sim08_mill_5ax_cam_sinumerik_mm.prt
- (D:\splmshare\nx110\MACH\samples)
- Open Post Configurator
- Create New Postprocessor
- Type Name Berlin_Post
- Select a Output Directory
- Push OK
- Select the new createt Post
- Push OK
- Use Save As button
- Type Name Berlin_Post_new
- Select a Output Directory
- Push OK

Save the post under a new name

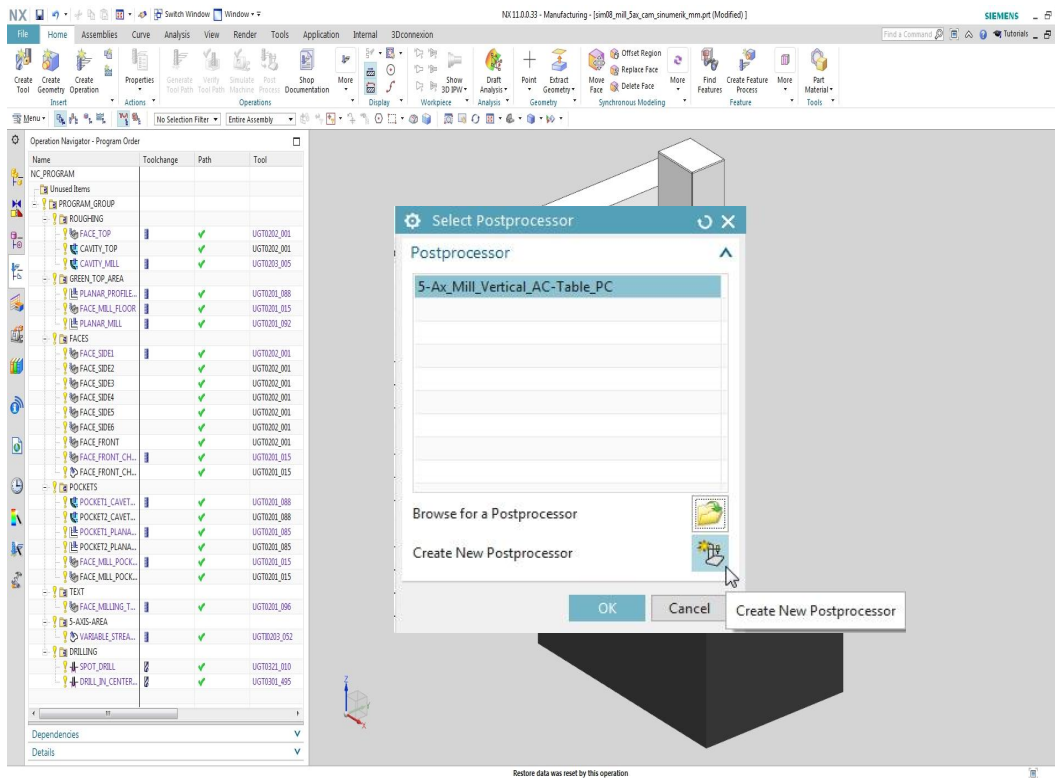


- Open sim08_mill_5ax_cam_sinumerik_mm.prt
- (D:\splmshare\nx110\MACH\samples)
- Open Post Configurator
- Create New Postprocessor
- Type Name Berlin_Post
- Select a Output Directory
- Push OK
- Select the new createt Post
- Push OK
- Use Save As button
- Type Name Berlin_Post_new
- Select a Output Directory
- Push OK

Save the post under a new name

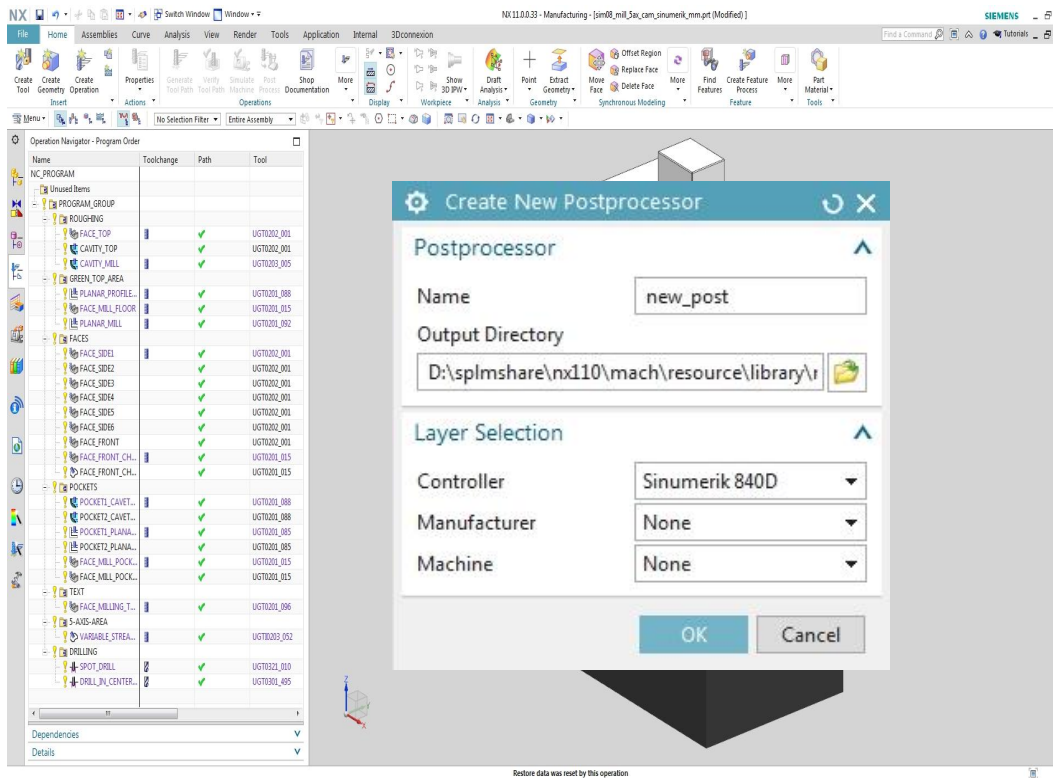


- Open sim08_mill_5ax_cam_sinumerik_mm.prt
- (D:\splmshare\nx110\MACH\samples)
- Open Post Configurator
- Create New Postprocessor
- Type Name Berlin_Post
- Select a Output Directory
- Push OK
- Select the new createt Post
- Push OK
- Use Save As button
- Type Name Berlin_Post_new
- Select a Output Directory
- Push OK

Save the post under a new name

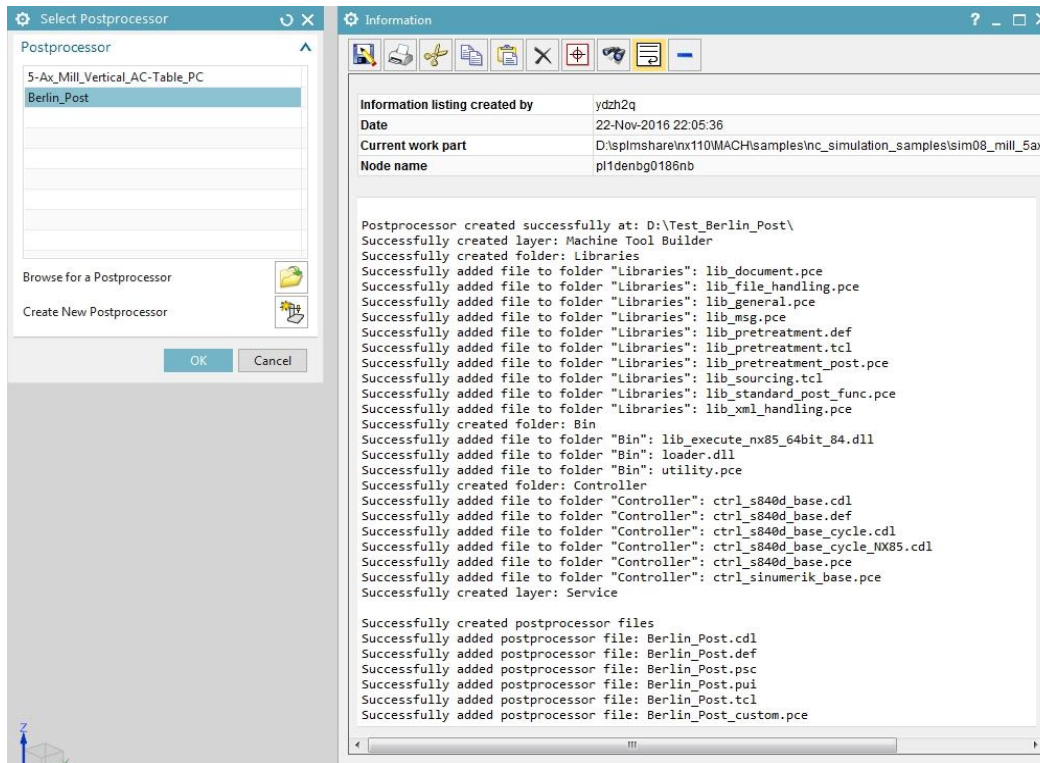


- Open sim08_mill_5ax_cam_sinumerik_mm.prt
- (D:\splmshare\nx110\MACH\samples)
- Open Post Configurator
- Create New Postprocessor
- Type Name Berlin_Post
- Select a Output Directory
- Push OK
- Select the new createt Post
- Push OK
- Use Save As button
- Type Name Berlin_Post_new
- Select a Output Directory
- Push OK

Save the post under a new name

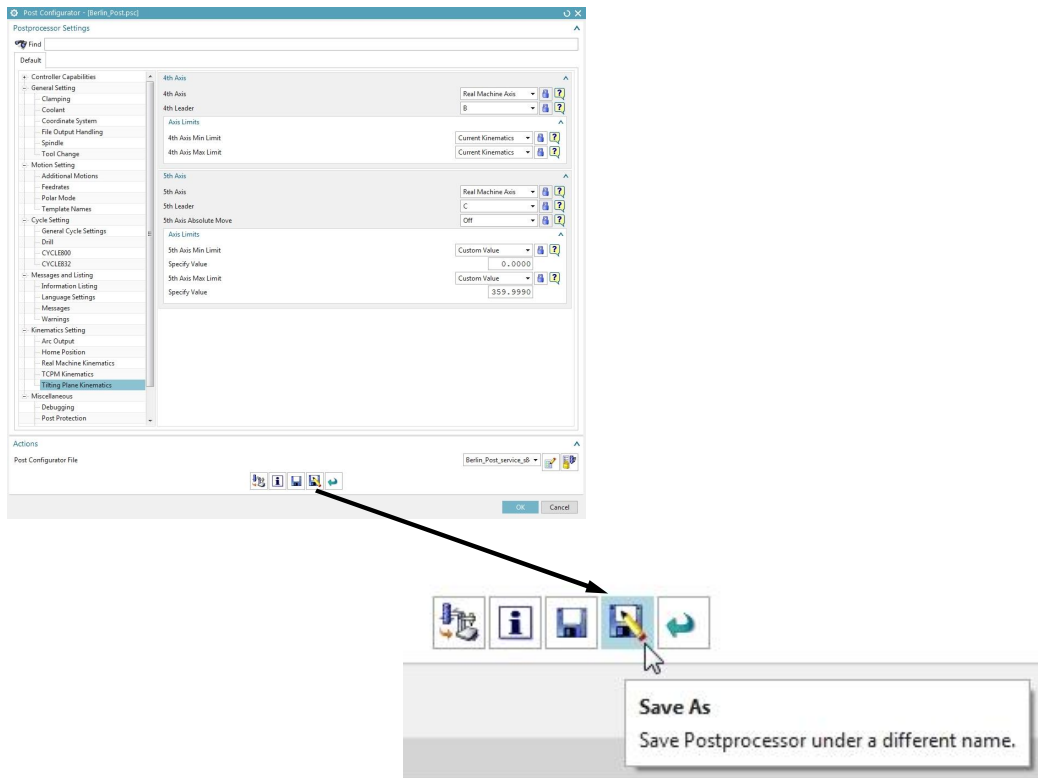

- Open sim08_mill_5ax_cam_sinumerik_mm.prt
- (D:\splmshare\nx110\MACH\samples)
- Open Post Configurator
- Create New Postprocessor
- Type Name Berlin_Post
- Select a Output Directory
- Push OK
- Select the new createt Post
- Push OK
- Use Save As button
- Type Name Berlin_Post_new
- Select a Output Directory
- Push OK

Save the post under a new name

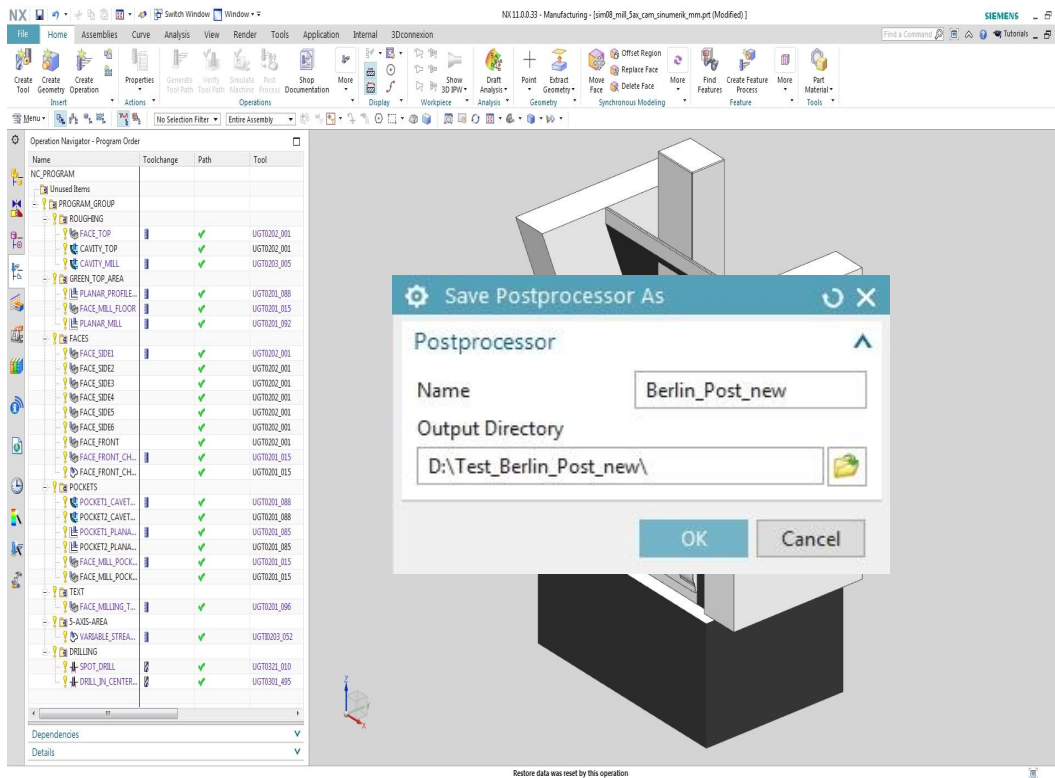

- Open sim08_mill_5ax_cam_sinumerik_mm.prt
- (D:\splmshare\nx110\MACH\samples)
- Open Post Configurator
- Create New Postprocessor
- Type Name Berlin_Post
- Select a Output Directory
- Push OK
- Select the new createt Post
- Push OK
- Use Save As button
- Type Name Berlin_Post_new
- Select a Output Directory
- Push OK